




14" & 19" Undermount Glides Hole Placement

Rubbermaid Incorporated,
Huntersville, NC 28078-1801
USA 1-877-533-1197
Canada 1-866-595-0525
www.rubbermaidpro.com



72" Vertical
Wall Mount

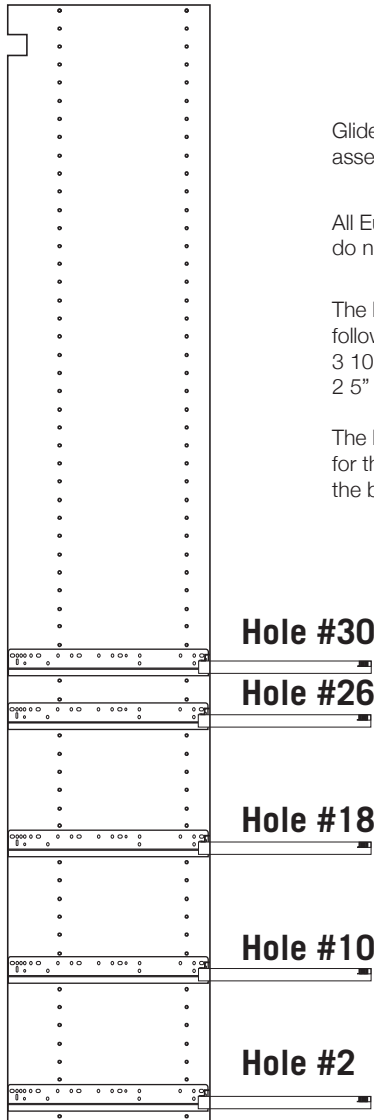

Glides should be installed onto vertical panels before assembling and mounting shelf stacks for faster installation.

All Euro screw locations are pre-drilled. #7 wood screws do not have predrilled holes on the vertical panel.

The hole numbers provided below are based upon the following configuration:
3 10" drawers on bottom
2 5" drawers above

The hole number provided is the row used for the Euro screws on the glide and the count starts from the bottom row of holes as #1.

Hutch Panel
Floor Mount

